
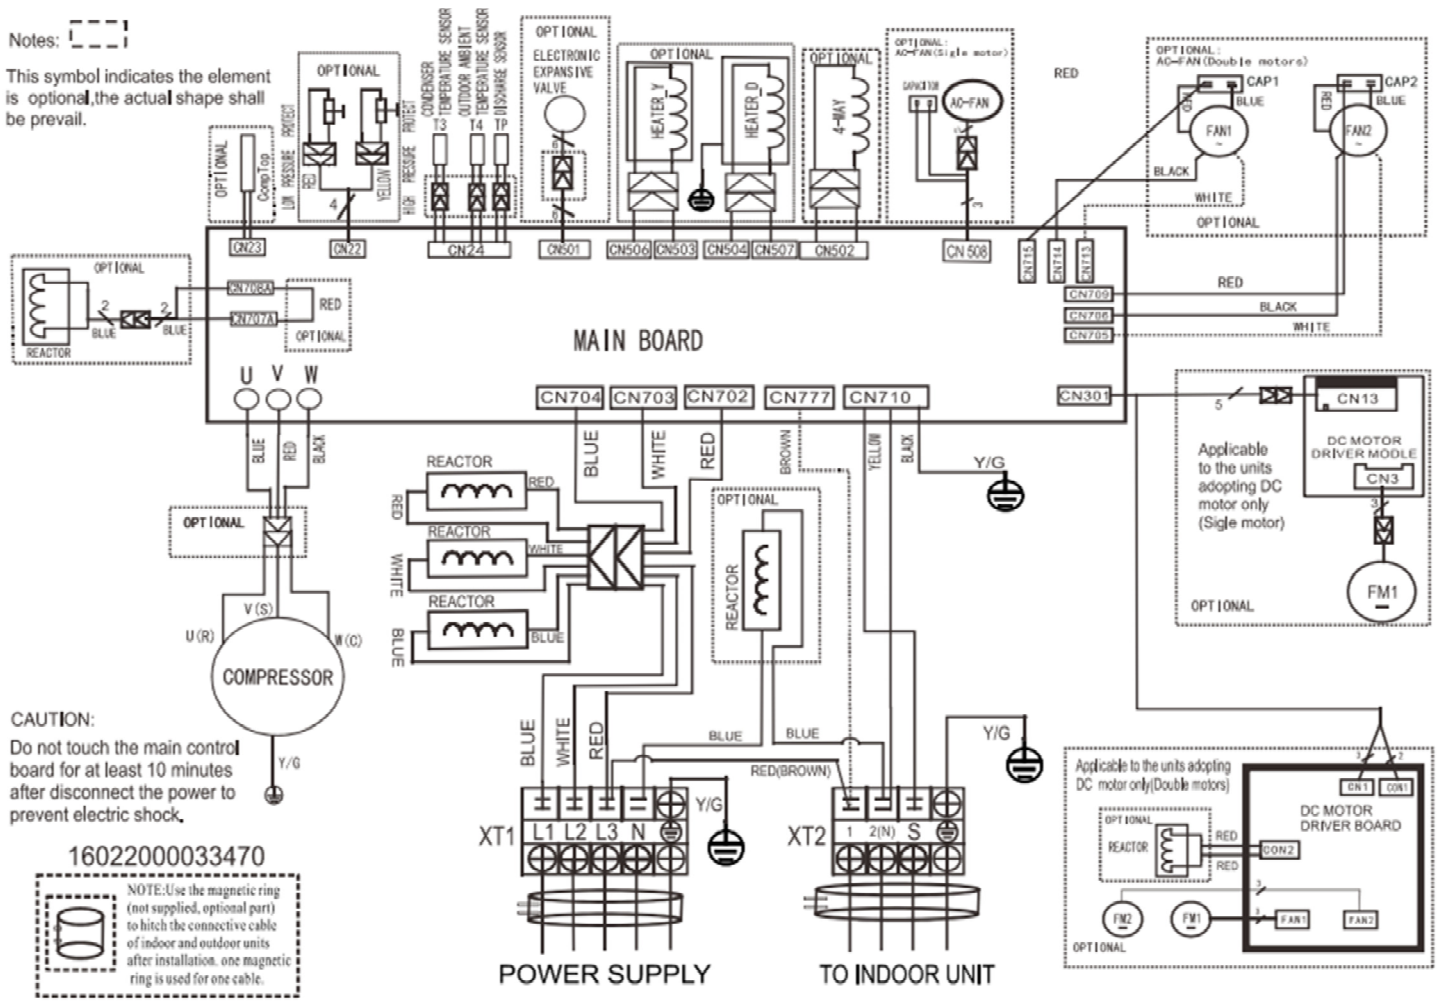



Notes: 

This symbol indicates the element is optional, the actual shape shall be prevail.



CAUTION:
Do not touch the main control board for at least 10 minutes after disconnect the power to prevent electric shock.

16022000033470
NOTE: Use the magnetic ring (not supplied, optional part) to hitch the connective cable of indoor and outdoor units after installation, one magnetic ring is used for one cable.

Model:	
AOU-140HRDC3A	
Wiring diagram	1