

16022500004263  
**WIRING DIAGRAM**  
 (INDOOR UNIT)  
**FUNCTION OF SWITCH**

SWITCH	FOR CCM UNIT ADDRESS	
S2 + S1		
ADDRESS	0~15	16~31
Factory Setting	<input checked="" type="checkbox"/>	<input type="checkbox"/>
S2 + S1		
ADDRESS	32~47	48~63
Factory Setting	<input checked="" type="checkbox"/>	<input type="checkbox"/>

SW2 / SW2-1 SWITCH	FOR FAN MOTOR CONTROL THEN NO POWER REQUEST.	
ON:		
STATE:	FAN OFF	FAN ON
MODE:	FAN OFF	FAN ON
Factory Setting:	<input checked="" type="checkbox"/>	<input type="checkbox"/>

SW2-2 SWITCH	BREEZELESS	
ON:		
STATE:	BREEZE LESS OFF	BREEZE LESS ON
MODE:	BREEZE LESS OFF	BREEZE LESS ON
Factory Setting:	<input checked="" type="checkbox"/>	<input type="checkbox"/>


  

Anti-cold air	
SW1	FAN MOTOR STOP-TEM
ON:	
STATE:	24
MODE:	Factory setting ✓
ON:	
STATE:	15
MODE:	Factory setting ✓
ON:	
STATE:	8
MODE:	According to the EEPROM setting

**FOR SETTING POWER(DC MOTOR MODEL ONLY)**


ENC1										
CODE	0	1	2	4	5	7	8	9	A	B
POWER	20	26	32~35	36~53	54~71	72~90	91~105	106~140	141~160	161~200
FACTORY SETTING	ACCORDING TO RELATED MODEL.									

SW3 SWITCH FOR AUTO-RESTART SETTING	ON:	STATE: REMEMBER / NO_REMEMBER	MODE: REMEMBER / NO_REMEMBER	Factory Setting: <input checked="" type="checkbox"/>
SW7 SWITCH FOR COOLING & HEATING OR COOLING ONLY SETTING	ON:	STATE: COOLING / HEATING	MODE: COOLING / HEATING ONLY	Factory Setting: <input checked="" type="checkbox"/>
SW6 SWITCH FOR TEMP. COMPENSATION SETTING	ON:	STATE: 6 4 2 E function	MODE: 6 4 2 E function	Factory Setting: <input checked="" type="checkbox"/>
SW5 SWITCH FOR MODE-PRIOR SETTING	ON:	STATE: HEAT HEAT COOL COOL	MODE: HEAT HEAT COOL COOL	Factory Setting: <input checked="" type="checkbox"/>
SW8 SWITCH FOR MAIN-SLAVE SETTING	ON:	STATE: MAIN / NO SLAVE	MODE: MAIN / NO SLAVE	Factory Setting: <input checked="" type="checkbox"/>

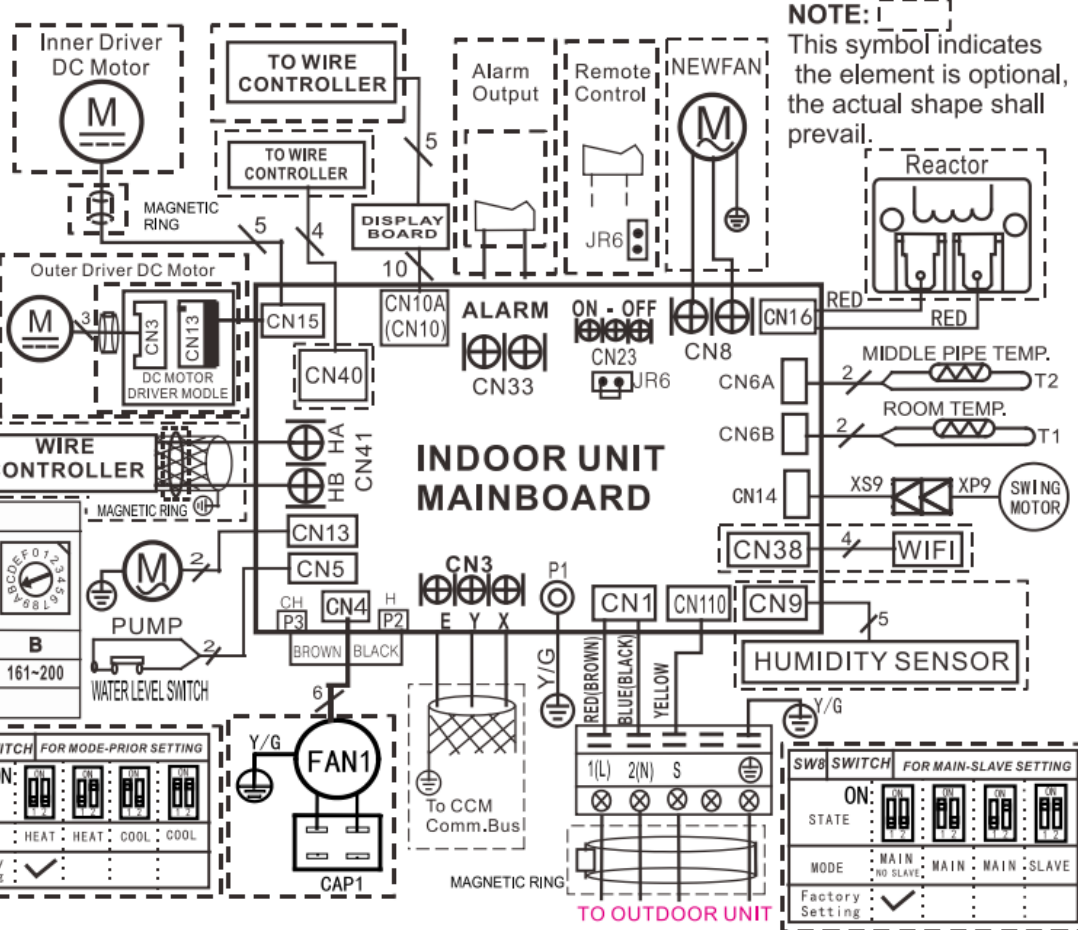

**NOTE:** This symbol indicates the element is optional, the actual shape shall prevail.

16022000020613

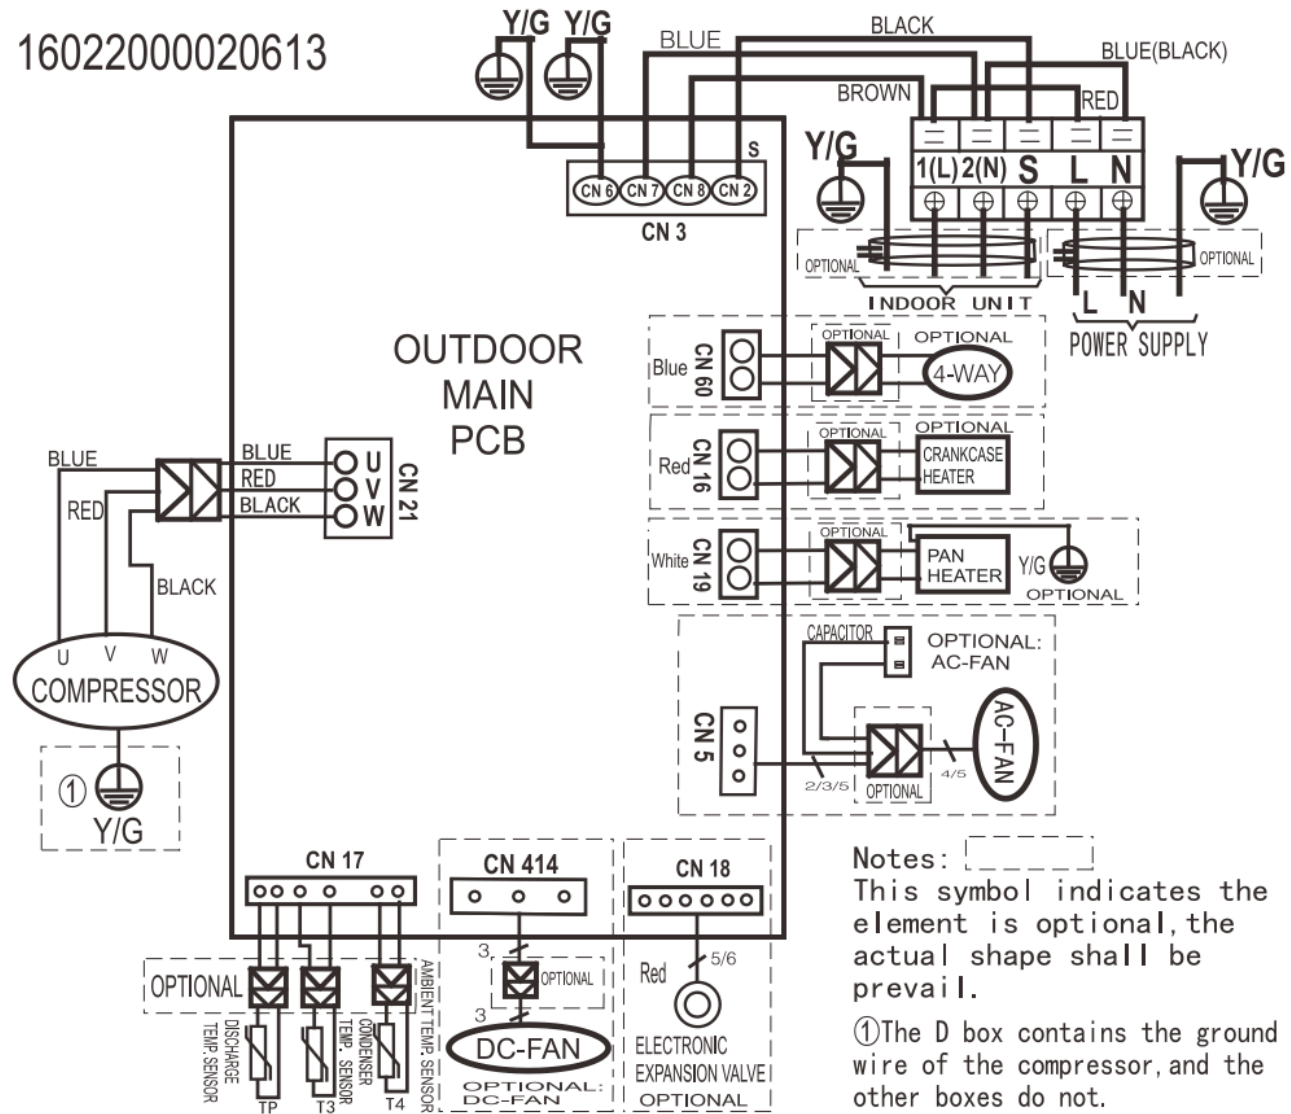

**Notes:**  
 This symbol indicates the element is optional, the actual shape shall be prevail.  
 ①The D box contains the ground wire of the compressor, and the other boxes do not.

Model:	
	AOU-71HRDC1A
	Wiring diagram

