


Note: ① Jumper cap needs to be connected if there is a jumper cap on unit's main board.  
 ② 5-core Electronic expansion valve connect to CN20.  
 6-core Electronic expansion valve connect to CN19;

|                |   |
|----------------|---|
| Model:         |  |
| AFKMI-22VRDC1A |   |
| Wiring Diagram | 2018-04-09  |