



Note: ① Jumper cap needs to be connected if there is a jumper cap on unit's main board.

② 5-core Electronic expansion valve connect to CN20.

6-core Electronic expansion valve connect to CN19;

Model:	
	AFKMI-28VRDC1A
	Wiring Diagram



2018-04-09